




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Power 2	 Shift + Power
 [ + ]	 Display / Media
 PP	 Back / Return
 [ ]	 Info / Angle
 [ ]↔	 Picture / Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Sustituto
 7	 7
 8	 8
 9	 9
 0	 0
 -/..	 Guide / EPG / -/..
 Contrast-	 I<< / Preset-
 Contrast+	 >>I / Preset+
 Brightness-	 Down
 Brightness+	 Up
 Text	 Text / Goto
 Text Subcode	 Subtitle / EQ
 Text Hold	 Shift + Stop /
 Text Size	 Zoom / Size
 Text Reveal	 Smart / List
 Text Index / Play	 Play / Slow
 Text Mix	 Shift + Text /
 Text Cancel	 Exit / Cancel / Clear



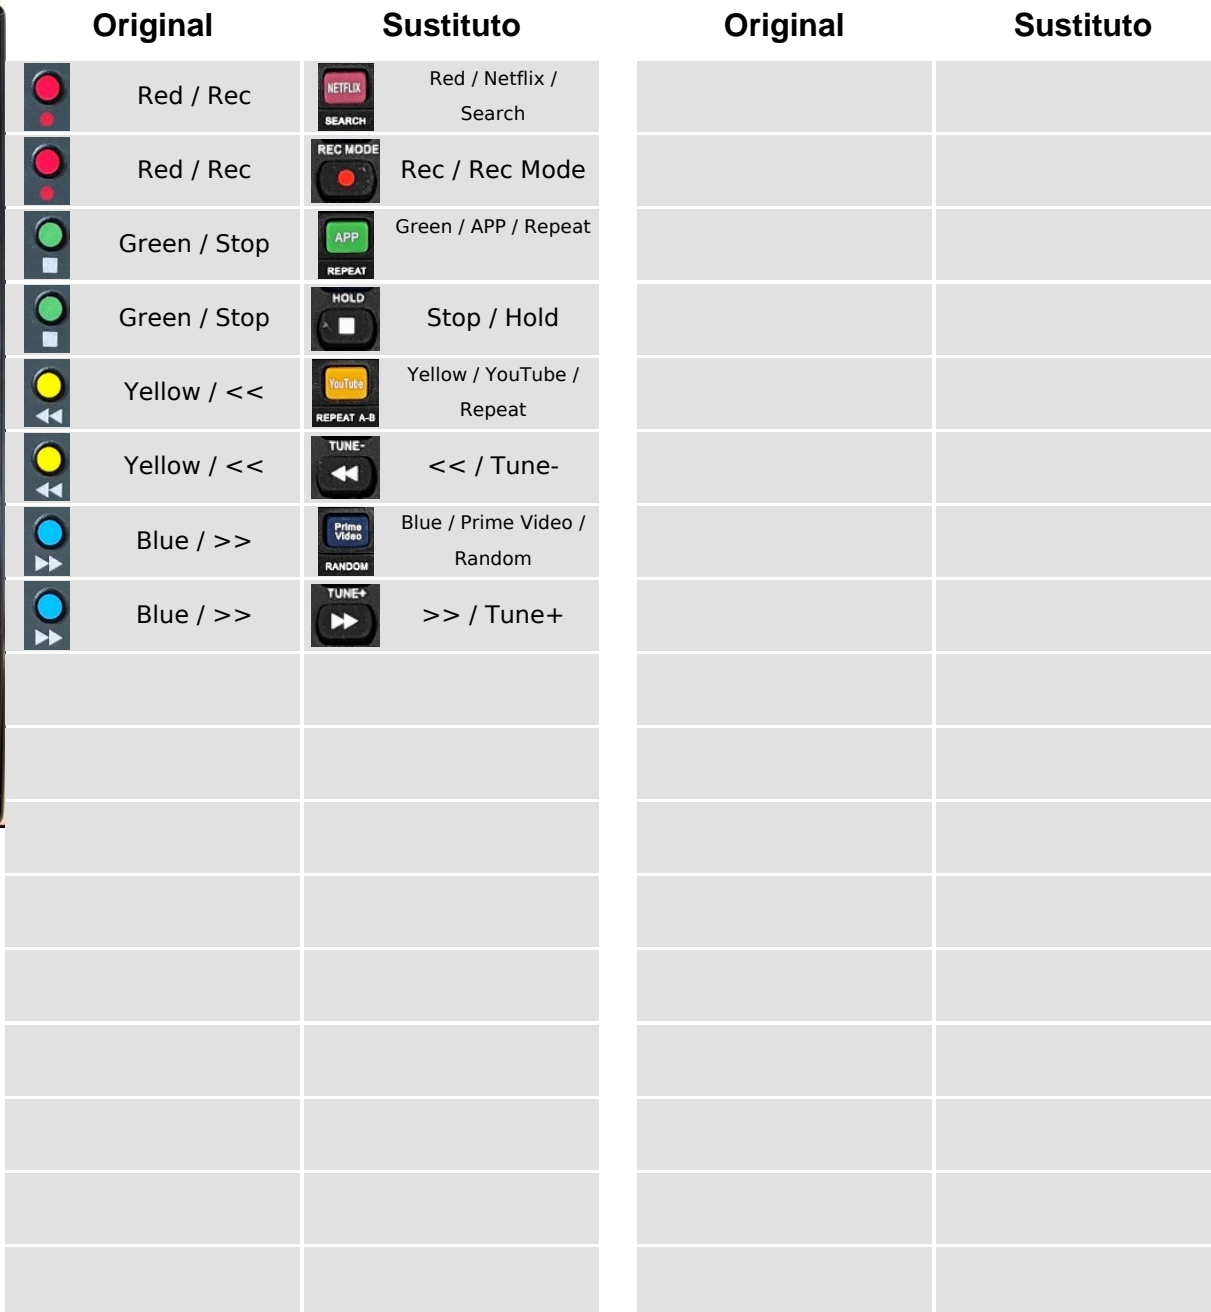





Original	Sustituto
	Power
	Mute
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Shift + Power
	Display / Media
	Back / Return
	Info / Angle
	Picture / Format
	1
	2
	3
	4
	5
	6

Original	Sustituto
	7
	8
	9
	0
	Guide / EPG / -/..
	Text / Goto
	Subtitle / EQ
	Shift + Stop /
	Zoom / Size
	Smart / List
	Play / Slow
	Shift + Text /
	Exit / Cancel / Clear
	Rec / Rec Mode
	Stop / Hold
	<< / Tune-
	>> / Tune+

