




 



 

 

 

 











 

 
 








Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 APPS	 Shift + Green / APP / Repeat

Original	Sustituto
 Home	 Shift + Menu /
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Menu	 Menu / Home
 i	 Info / Angle
 Back	 Back / Return
 Mouse	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 f	 Smart / List
 Red	 Red / Netflix / Search





Original	Sustituto	Original	Sustituto
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Pause	 Pause / Step / Freeze		
 Play	 Play / Slow		
 Stop	 Stop / Hold		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Text	 Text / Goto		
 Rec	 Rec / Rec Mode		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 MTS	 Fav / Marker / PC		
 Sub	 Subtitle / EQ		

