 



 



 















 



 





 

 



 



 



 





 



 

 











Original	Sustituto	Original	Sustituto
 Power	 Power	 Enter	 Shift + OK
 Mute	 Mute / Dimmer	 Tv	 TV/Radio /
 Right/Vol+	 Right	 Scart	 >> / Tune+
 Left/Vol-	 Left	 AV	 AV / Input / RDS
 1	 1	 PC	 Fav / Marker / PC
 2	 2	 Sleep	 Sleep / Timer
 3	 3	 Freeze	 Pause / Step / Freeze
 4	 4	 Wide	 Picture / Format
 5	 5	 Display	 Display / Media
 6	 6	 Menu	 Menu / Home
 7	 7	 e	 Info / Angle
 8	 8	 MPX	 Exit / Cancel / Clear
 9	 9	 PIP/PBP	 D.Menu / Top
 0	 0	 Up CH	 Up
 CH+	 CH+ / Page+	 Down CH	 Down
 CH-	 CH- / Page-	 Vol-	 Vol-
 Recall	 Back / Return	 Vol+	 Vol+





Original	Sustituto
OK	OK
SWAP	SLOW Play / Slow
ACTIVE	SHIFT + TV/RADIO Program
POSITION	TITLE Sound / Title
SIZE/MODE	OPT-TOOLS Setup / OPT /
INDEX	SHIFT + ANGLE Shift + Info / Angle
SUBTITLE	EQ Subtitle / EQ
REVEAL	TUNE- << / Tune-
TELETEXT	GOTO TEXT Text / Goto
SIZE	SIZE ZOOM Zoom / Size
MIX	SHIFT + GOTO TEXT Shift + Text /
SUBPAGE	SHIFT + EQ Subtitle / EQ
HOLD	HOLD Stop / Hold
Red	NETFLIX Red / Netflix / Search
Green	APP Green / APP / Repeat
Yellow	YouTube Yellow / YouTube / Repeat
Blue	Prime Video Blue / Prime Video / Random

Original	Sustituto

