

 



































Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text / Goto
 PRE-CH	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 CH LIST	 Smart / List
 Vol+	 Vol+

Original	Sustituto
 Vol-	 Vol-
 Ch+	 CH+ / Page+
 Ch-	 CH- / Page-
 Settings	 Setup / OPT /
 Home	 Menu / Home
 Guide	 Guide / EPG / -/-
 Info	 Info / Angle
 E-Manual	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Return	 Back / Return
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Sustituto	Original	Sustituto
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Pic Size	Zoom / Size		
Picture	Picture / Format		
Ad/Subt.	Subtitle / EQ		
Stop	Stop / Hold		
<</<<	<< / Tune-		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
>>/>>	>> / Tune+		

Original	Sustituto

