 

 











 

 

 

 

 

 

 

 

 







Original	Sustituto
 Power	 Power
 USB/Card	 AV / Input / RDS
 Display	 Display / Media
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Goto	 Text / Goto

Original	Sustituto
 10+	 Guide / EPG / -/--
 Title	 Sound / Title
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Zoom	 Zoom / Size
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Play/Pause	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+



