





 



 

 

 











Original	Sustituto	Original	Sustituto
	Index		Play / Slow
	Red / -1		Red / Netflix / Search
	Green / Timer /		Green / APP / Repeat
	Yellow / Stop		Yellow / YouTube / Repeat
	Blue / Reveal		Blue / Prime Video / Random
	[≡]]]		Rec / Rec Mode
	Cancel		Exit / Cancel / Clear
	Size		Zoom / Size
	TV		TV/Radio /
	Text		Text / Goto
	1		1
	2		2
	3		3
	Tint-		Shift + Left
	Tint+		Shift + Right
	4		4
	5		5
	6		6
	Contrast-		<< / Tune-
	Contrast+		>> / Tune+
	7		7
	8		8
	9		9
	Brightness-		I<< / Preset-
	Brightness+		>>I / Preset+
	P/C		Back / Return
	0		0
	AV		AV / Input / RDS
	←•→		Display / Media
	**		Smart / List
	PIP		Picture / Format
	i		Info / Angle
	i		Menu / Home
	----		Subtitle / EQ





Original	Sustituto	Original	Sustituto
	 << / Preset-		
	 >> / Preset+		
	 Rec / Rec Mode		
	 Stop / Hold		
	 << / Tune-		
	 >> / Tune+		
	 Pause / Step / Freeze		
	 Play / Slow		
	 CH+ / Page+		
	 CH- / Page-		
	 Power		





Original	Sustituto	Original	Sustituto
-1	Red / Netflix / Search	*+	>> / Preset+
+1	Green / APP / Repeat	P/C	Back / Return
STOP	Yellow / YouTube / Repeat	0	0
E7	Blue / Prime Video / Random	PIP	Picture / Format
E8	Text / Goto	i	Info / Angle
1	1	P+	CH+ / Page+
2	2	Up	Up
3	3	Mute	Mute / Dimmer
4	4	Left	Left
5	5	Vol-	Vol-
6	6	OK	OK
-0	<< / Tune-	Right	Right
0+	>> / Tune+	Vol+	Vol+
7	7	AUX	Shift + 7
8	8	P-	CH- / Page-
9	9	Down	Down
-*	<< / Preset-	Power	Power

