




 


























 

 












 






 

















Original	Sustituto
	 Power
	 ambilight
	 Shift + Blue / Prime
	 Display / Media
	 Shift + Red / Netflix
	 Shift + Yellow / YouTube
	 D.Menu / Top
	 Smart / List
	 AV / Input / RDS
	 Up
	 Down
	 Right
	 Left
	 OK
	 Back / Return
	 Menu / Home
	 Guide / EPG / -/-

Original	Sustituto
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Vol-
	 Mute / Dimmer
	 Exit / Cancel / Clear
	 CH+ / Page+
	 CH- / Page-
	 1





Original	Sustituto	Original	Sustituto
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		
TEXT	Text		
+ OPTIONS	+ Options		

