



	Original	Sustituto		Original	Sustituto
	Power		Power		Quick Select 2
	Mute		Mute / Dimmer		Quick Select 3
	TV		TV/Radio /		
	HDMI		0		
	OPT		Setup / OPT /		
	AUX		7		
	Bluetooth		9		
	Bass+		CH+ / Page+		
	Bass-		CH- / Page-		
	Vol+		Vol+		
	Vol-		Vol-		
	Night		Exit / Cancel / Clear		
	Dialog		Back / Return		
	Movie		Red / Netflix / Search		
	Pure		Green / APP / Repeat		
	Music		Yellow / YouTube / Repeat		
	Quick Select 1		1		

