
 
 
 
 
 
 
 

 





 
 
 
 
 
 

 
 

 
 
 
 

 
 






Original	Sustituto	Original	Sustituto
	Setup / OPT /		Pause / Step / Freeze
	Power		Play / Slow
	D.Menu / Top		OK
	AV / Input / RDS		TV/Radio /
	Shift + Power		Smart / List
	Exit / Cancel / Clear		Fav / Marker / PC
	Stop / Hold		Info / Angle
	I<< / Preset-		Guide / EPG / -/-
	>>I / Preset+		Subtitle / EQ
	CH+ / Page+		Audio / Lang I/II
	Up		Text / Goto
	CH- / Page-		Mute / Dimmer
	Down		Vol-
	Left		Vol+
	<< / Tune-		1
	>> / Tune+		2
	Right		3





Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
0	0
↵	RETURN BACK
GOTO	SHIFT + GOTO TEXT
Red/[<>]	NETFLIX SEARCH
Green/Angle	APP REPEAT
Yellow/Prog	YouTube REPEAT A-B
Blue/Repeat	Prime Video RANDOM

Original	Sustituto

