



Original	Sustituto
Open/Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Search	Red / Netflix / Search
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze

Original	Sustituto
Play	Play / Slow
Stop	Stop / Hold
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Up	Up
Left	Left
Enter	OK
Right	Right
Top Menu	D.Menu / Top
Down	Down
Menu	Menu / Home
Clear	Exit / Cancel / Clear
Display	Display / Media
Return	Back / Return
Mode	Text / Goto





Original	Sustituto	Original	Sustituto
SETUP	Setup	OPT-TOOLS SETUP	Setup / OPT /
HDMI	HDMI	SHIFT + HDMI - BAT 0	Shift + 0
ZOOM	Zoom	SIZE ZOOM	Zoom / Size



 








Original	Sustituto
Open/Close	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Search	Red / Netflix / Search
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze

Original	Sustituto
Play	Play / Slow
Stop	Stop / Hold
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>I	>>I / Preset+
Up	Up
Left	Left
Enter	OK
Right	Right
Top Menu	D.Menu / Top
Down	Down
Menu	Menu / Home
Clear	Exit / Cancel / Clear
Display	Display / Media
Return	Back / Return
Mode	Text / Goto





Original	Sustituto
 Setup	 Setup / OPT /
 HDMI	 +  Shift + 0
 Zoom	 Zoom / Size

Original	Sustituto

