


















Original	Sustituto	
On/Off	 Power	
Mute	 Mute / Dimmer	
Update	 Play / Slow	
Txt Stop	 Stop / Hold	
Menu audio	 Audio / Lang I/II	
Subt.List	 Subtitle / EQ	
Txt Expand	 Zoom / Size	
Sleep Timer	 Sleep / Timer	
Return TV	 TV/Radio /	
Menu video	 D.Menu / Top	
Text	 Text / Goto	
TV/AV	 AV / Input / RDS	
Menu	 Menu / Home	
Menu Up	 Up	
Info	 Info / Angle	
Menu Left	 Left	
Menu Right	 Right	

Original	Sustituto	
Menu Down	 Down	
Volume+	 Vol+	
Chan.Up	 CH+ / Page+	
Volume-	 Vol-	
Chan.Down	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
0/10	 0	
2.Fav P/C 2.	 Fav / Marker / PC	
Red	 Red / Netflix / Search	



Power: **POWER**
 DIMMER: **MUTE**
 SHIFT: **SHIFT**

TV: **SLOW**
 DVD: **STEP - FREEZE**
 SAT: **HOLD**
 AUX: **REC MODE**

PLAY: **TUNE-**
 PAUSE: **TUNE+**
 STOP: **PRESET-**
 RED: **PRESET+**

LEFT: **TITLE**
 RIGHT: **LANG VIII**
 LEFT: **EQ**
 RIGHT: **SURROUND**

SOUND: **FORMAT**
 AUDIO: **SIZE**
 SUBTITLE: **TIMER**
 UP: **PROGRAM**

PICTURE: **TOP MENU**
 ZOOM: **OPT-TOOLS**
 SLEEP: **GOTO**
 TV/RADIO: **RDS**

D.MENU: **SETUP**
 TEXT: **AV INPUT**

HOME: **MENU**
 ANGLE: **INFO**

OK: **OK**

CLEAR: **EXIT**
 RETURN: **BACK**

CANCEL: **+**
VOL
-

LIST: **SMART**
MEDIA
DISPLAY

TV: **1**
 DVD: **2**
 CD - STB: **3**

VIDEO: **4**
 TAPE: **5**
 TUNER: **6**

AUX - HDD: **7**
 USB: **8**
 BLUETOOTH: **9**

GUIDE: **0**
 EPG: **0**
 FAV MARKER: **0**

NETFLIX: **NETFLIX**
 APP: **APP**
 YouTube: **YouTube**
 Prime Video: **Prime Video**

SEARCH: **SEARCH**
 REPEAT: **REPEAT**
 REPEAT A-B: **REPEAT A-B**
 RANDOM: **RANDOM**

Mandis shop
 www.mandis.tv