








 






















 





| Original | Sustituto | Original | Sustituto |
|----------------------|--|--------------------|---|
| Index / Text Subcode |  D.Menu / Top | Cancel / Text Size |  Exit / Cancel / Clear |
| TV Moni |  Smart / List | ATR / Text Reveal |  Display / Media |
| Zero Return |  Green / APP / Repeat | Enter / Text Hold |  OK |
| 00:00:00 |  Red / Netflix / Search | Up / Play |  Play / Slow |
| Pause / > < |  Pause / Step / Freeze | Timer Rec |  +  Shift + Sleep / Timer |
| 0 / AV |  AV / Input / RDS | Rec / OTR |  Rec / Rec Mode |
| 0 / AV |  0 | Up / Play |  Up |
| Trk+ |  CH+ / Page+ | Menu |  Menu / Home |
| Trk- |  CH- / Page- | Program |  TV/Radio / |
| Left / << |  Left | Text / Mix |  Text / Goto |
| Left / << |  << / Tune- | 8 |  8 |
| Right / >> |  >> / Tune+ | Timer |  Sleep / Timer |
| Right / >> |  Right | Eject |  Eject / Surround |
| Down / Stop |  Stop / Hold | 1 |  1 |
| Down / Stop |  Down | 2 |  2 |
| Enter / Text Hold |  +  Shift + Stop / | 3 |  3 |
| Cancel / Text Size |  Zoom / Size | 4 |  4 |



