



 

 





 

 

 











 

 

 








 

 

 
 

 

 


Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Reset	 Guide / EPG / -/--
 0 / AV PC	 0
 RTN	 Back / Return
 Display	 Display / Media
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Input	 AV / Input / RDS

Original	Sustituto
 Left / V-	 Left
 Left / V-	 Vol-
 Menu / Enter	 Menu / Home
 Menu / Enter	 OK
 Right / V+	 Right
 Right / V+	 Vol+
 ARC	 Info / Angle
 Down / P-	 Down
 Down / P-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Text Subcode	 Subtitle / EQ
 PIP Up	 Shift + Up
 PIP Position	 Shift + Left
 PIP On/Off	 Shift + OK
 PIP Size	 Shift + Right
 PIP Down	 Shift + Down





Original		Sustituto		Original	Sustituto
	Text Reveal		Play / Slow		
	Text Index		Smart / List		
	Text Hold		Stop / Hold		
	Text Cancel		Rec / Rec Mode		
	Text Size		Zoom / Size		
	Green / MUP		Green / APP / Repeat		
	Yellow / Pause		Yellow / YouTube / Repeat		
	Yellow / Pause		Pause / Step / Freeze		
	Blue / Audio		Blue / Prime Video / Random		
	Blue / Audio		Audio / Lang I/II		
	Red / Picture		Red / Netflix / Search		
	Red / Picture		Setup / OPT /		
	Sleep		Sleep / Timer		
	Mute		Mute / Dimmer		

