 























 



 











































Original	Sustituto	Original	Sustituto
 Standby	 Power	 Tv/Radio	 TV/Radio /
 Source	 AV / Input / RDS	 Info	 Info / Angle
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Vol+	 Vol+
 FAV	 Fav / Marker / PC	 EPG	 Guide / EPG / -/--
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Media	 Display / Media
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Sleep	 Sleep / Timer	 F1	 Rec / Rec Mode





Original	Sustituto
F2	TOP MENU / D.MENU → D.Menu / Top
AUDIO / I/II	LANG I/II / AUDIO → Audio / Lang I/II
ASPECT / SIZE	SHIFT + SIZE / ZOOM → Shift + Zoom /
TEXT	GOTO / TEXT → Text / Goto
REVEAL	OPT-TOOLS / SETUP → Setup / OPT /
HOLD	SHIFT + HOLD → Shift + Stop /
SUBPAGE	SURROUND → Eject / Surround
Play	SLOW → Play / Slow
Pause	STEP-FREEZE → Pause / Step / Freeze
Stop	HOLD → Stop / Hold
ZOOM / INDEX	SIZE / ZOOM → Zoom / Size
SUBTITLE	EQ / SUBTITLE → Subtitle / EQ
<<	TUNE- → << / Tune-
>>	TUNE+ → >> / Tune+
I<<	PRESET- → I<< / Preset-
>>I / Mix	PRESET+ → >>I / Preset+
Red	NETFLIX / SEARCH → Red / Netflix / Search

Original	Sustituto
Green	APP / REPEAT → Green / APP / Repeat
Yellow	YouTube / REPEAT A-B → Yellow / YouTube / Repeat
Blue	Prime Video / RANDOM → Blue / Prime Video / Random

