



| Original | Sustituto |
|---------------|-----------------------|
| Power | Power |
| TV/Video | AV / Input / RDS |
| Counter Reset | Exit / Cancel / Clear |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Prog + | CH+ / Page+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Prog - | CH- / Page- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Display | Display / Media |
| 0 | 0 |
| Rec | Rec / Rec Mode |

| Original | Sustituto |
|-----------|-----------------------|
| Timer Rec | Sleep / Timer |
| Slow | Shift + Play / |
| Pause | Pause / Step / Freeze |
| Play | Play / Slow |
| << | << / Tune- |
| >> | >> / Tune+ |
| Stop | Stop / Hold |
| SP/LP | Sound / Title |
| A.Select | Audio / Lang I/II |





| Original | Sustituto |
|----------|------------------|
| Power | Power |
| Source | AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| PR+ | CH+ / Page+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| PR- | CH- / Page- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Vol+ | Vol+ |
| 0 | 0 |
| Vol- | Vol- |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

