












































 

















 


 


 















 
















Original	Sustituto	Original	Sustituto
PWR On/Off	 Power	Radio	 TV/Radio /
Mute	 Mute / Dimmer	Sys/Serv	 D.Menu / Top
H/V Play	 Play / Slow	Scan/Setup	 Setup / OPT /
Dec/Pause	 Pause / Step / Freeze	Text	 Text / Goto
East	 Stop / Hold	P.lock	 AV / Input / RDS
Lang./Rewind	 Rec / Rec Mode	Menu	 Menu / Home
LNB F.Forward	 << / Tune-	Menu Up	 Up
Interat	 >> / Tune+	Info	 Info / Angle
+	 I<< / Preset-	Menu Left	 Left
De-emph	 >>I / Preset+	OK Enter	 OK
50j17	 Sound / Title	Menu Right	 Right
Subt.List	 Audio / Lang I/II	Exit	 Exit / Cancel / Clear
Navi Mode	 Subtitle / EQ	Menu Down	 Down
Alt/16:9	 Eject / Surround	Swap	 Back / Return
Wn	 Picture / Format	Volume+	 Vol+
Sleep Timer	 Zoom / Size	TV	 Smart / List
	 Sleep / Timer	CH/Page+	 CH+ / Page+




Original	Sustituto	Original	Sustituto
Volume-	 Vol-	Yellow	 Yellow / YouTube / Repeat
Display	 Display / Media	Blue	 Blue / Prime Video / Random
CH/Page-	 CH- / Page-	On/Off	 +  Shift + Power
1. ?	 1	Freeze	 +  Shift + Pause / Step /
2abc	 2		 +  Shift + Stop /
3def	 3	Tune-	 +  Shift + << /
4ghi	 4	Tune+	 +  Shift + >> /
5jkl	 5	Aft/Caf	 +  Shift + D.Menu / Top Menu
6mno	 6	Auth./DISEQC	 +  Shift + Menu /
7pqrm	 7	Help	 +  Shift + Info / Angle
8tuv	 8	View	 +  Shift + OK
9wxyz	 9	Clear	 +  Shift + Exit / Cancel / Clear
Guide Pilote	 Guide / EPG / -/--	Copy/Delete	 +  Shift + Smart / List
0/10	 0	CHH+	 +  Shift + CH+ /
FAV Pref.	 Fav / Marker / PC	Erase	 +  Shift + Display / Media
Red	 Red / Netflix / Search	CHH-	 +  Shift + CH- /
Green	 Green / APP / Repeat	Video	 +  Shift + 4

Original	Sustituto	Original	Sustituto
Yellow	 Yellow / YouTube / Repeat	Blue	 Blue / Prime Video / Random
On/Off	 +  Shift + Power	Freeze	 +  Shift + Pause / Step /
	 +  Shift + Stop /	Tune-	 +  Shift + << /
Tune+	 +  Shift + >> /	Aft/Caf	 +  Shift + D.Menu / Top Menu
Auth./DISEQC	 +  Shift + Menu /	Help	 +  Shift + Info / Angle
View	 +  Shift + OK	Clear	 +  Shift + Exit / Cancel / Clear
Copy/Delete	 +  Shift + Smart / List	CHH+	 +  Shift + CH+ /
Erase	 +  Shift + Display / Media	CHH-	 +  Shift + CH- /
Video	 +  Shift + 4		



Original

Sustituto

Original	Sustituto
App	 Shift + Green / APP / APP /

Original

Sustituto

