

















Original	Sustituto
Power	Power
Mute	Mute / Dimmer
Red/EPG	Red / Netflix / Search
Red/EPG	Guide / EPG / -/--
Tv/Radio	TV/Radio /
Pause	Pause / Step / Freeze
Green/Audio	Green / APP / Repeat
Green/Audio	Audio / Lang I/II
Info	Info / Angle
Recall	Back / Return
Yellow/Pg	Yellow / YouTube / Repeat
Yellow/Pg	Sleep / Timer
Yellow/Pg	Shift + CH+ /
TXT	Text / Goto
Blue/PgDw/Forma	Blue / Prime Video / Random
Blue/PgDw/Forma	Shift + CH- /
Blue/PgDw/Forma	Picture / Format

Original	Sustituto
Up/CH+	Up
Left	Left
Vol-	Vol-
OK	OK
Right	Right
Vol+	Vol+
Down/CH-	Down
Menu	Menu / Home
Exit	Exit / Cancel / Clear
A-Z	Setup / OPT /
SAT	Shift + 0
FAV	Fav / Marker / PC
1	1
2	2
3	3
4	4
5	5



t



Original	Sustituto
 6	 6
 7	 7
 8	 8
 9	 9
 FAV+	 CH+ / Page+
 0	 0
 FAV-	 CH- / Page-

Original	Sustituto

