
 

 




Original	Sustituto
 Power	 Power
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Red / TTX	 Red / Netflix / Search
 Red / TTX	 Text / Goto
 Green / SUB	 Green / APP / Repeat
 Green / SUB	 Subtitle / EQ
 Yellow / Sleep	 Yellow / YouTube / Repeat
 Yellow / Sleep	 Sleep / Timer
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 +  Shift + Sleep / Timer

Original	Sustituto
 Menu	 Menu / Home
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 EPG	 Guide / EPG / -/-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 List	 Smart / List
 CH-	 CH- / Page-
 1	 1
 2	 2





Original	Sustituto	Original	Sustituto
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
TV-RADIO	TV-Radio	PROGRAM TV/RADIO	TV/Radio /
0	0	HDMI - BAT 0	0
FAV	Fav	PC FAV MARKER	Fav / Marker / PC

