



 
 












Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Loudness / Page Down	 CH- / Page-
 Page Up / PTY	 CH+ / Page+
 Set Up	 Setup / OPT /
 Sound	 Sound / Title
 Listen Mode	 Smart / List

Original	Sustituto
 RDS Display	 Display / Media
 Left / P.Call- / I<<	 I<< / Preset-
 Up	 Up
 Right / P.Call+ / >>I	 >>I / Preset+
 Down	 Down
 << / Tuning-	 << / Tune-
 >> / Tuning+	 >> / Tune+
 Play Reverse	 Left
 Play/Pause / Band	 Play / Slow
 Bass Boost	 Audio / Lang I/II
 A/B +100 Disc	 Fav / Marker / PC
 Auto / Stop	 Stop / Hold
 DVD/6CH	 Shift + 2
 PHONO	 Shift + 1
 CD/DVD	 Shift + 3
 Tuner	 Shift + 6
 MD/Tape	 Shift + 5













 











 

 





 





 





 

 

 





 
 






Original	Sustituto
Video1	Shift + 4
Video 2	Shift + 8
Cinema EQ	Subtitle / EQ
Tone	Eject / Surround
Mute	Mute / Dimmer
Volume-	Vol-
Volume+	Vol+

Original	Sustituto





Original	Sustituto	Original	Sustituto
 DVD Power	 Power	 Up	 Up
 1	 1	 Right/>>>I	 >>I / Preset+
 2	 2	 Down	 Down
 3	 3	 << Tuning	 << / Tune-
 4	 4	 >> Tuning	 >> / Tune+
 5	 5	 Enter	 OK
 6	 6	 Play/Pause	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 Pause	 Pause / Step / Freeze
 9	 9	 Mute	 Mute / Dimmer
 0	 0	 Volume-	 Vol-
 +10	 Guide / EPG / -/--	 Volume+	 Vol+
 Menu	 Menu / Home		
 OSD	 Display / Media		
 Return	 Back / Return		
 Top Menu	 D.Menu / Top		
 Left/I<<<	 I<<< / Preset-		

