



Original	Sustituto
VCR	Green / APP / Repeat
VCR	+ Shift + 4
DVD	Red / Netflix / Search
DVD	+ Shift + 2
Power	Power
1	1
2	2
3	3
Open/Close	Eject / Surround
4	4
5	5
6	6
7	7
8	8
9	9
Clear / Count. Reset	Exit / Cancel / Clear
Angle	Info / Angle

Original	Sustituto
TV / VCR	Smart / List
0	0
Audio	Audio / Lang I/II
Subtitle/ATR	Subtitle / EQ
Memory	TV/Radio /
Zoom	Zoom / Size
EAM	Text / Goto
Play Mode	Picture / Format
Rec / OTR.	Rec / Rec Mode
Return	Back / Return
Display / CLK/CNT	Display / Media
Play	Play / Slow
<< REW	<< / Tune-
FWD >>	>> / Tune+
Slow	+ Shift + Play /
Stop	Stop / Hold
Pause Still	Pause / Step / Freeze





Original	Sustituto
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
A-B RPT	Yellow / YouTube / Repeat
Set Up / VCR	Setup / OPT /
Up	Up
Up	CH+ / Page+
Menu	Menu / Home
Zero Return	Shift + 0
Left	Left
Enter	OK
Right	Right
Instant Skip	Blue / Prime Video / Random
Down	Down
Down	CH- / Page-

Original	Sustituto

