
































 

 



 








 





 

























 

























Original		Sustituto		Original		Sustituto	
	Power		Power		Tv/Radio		TV/Radio /
	Mute		Mute / Dimmer		i		Info / Angle
	USB/Media 1		Display / Media		Sleep		Sleep / Timer
	USB/Media 1		Shift + 8		Source		AV / Input / RDS
	Play/Pause/Text		Text / Goto		Menu		Menu / Home
	Play/Pause/Text		Play / Slow		Left		Left
	Play/Pause/Text		Pause / Step / Freeze		Up		Up
	Stop/Index		Stop / Hold		Right		Right
	Rec/Media2		Rec / Rec Mode		OK		OK
	Rec/Media2		Shift + Display / Media		Down		Down
	I<</Hold		I<< / Preset-		Mouse		Shift + OK
	>>I/Size		>>I / Preset+		Smart		Smart / List
	<</S. Page		<< / Tune-		Exit		Exit / Cancel / Clear
	>>/Reveal		>> / Tune+		CH+		CH+ / Page+
	I-II/Nicam		Shift + Picture / Format		EPG		Guide / EPG / -/-
	Audio		Audio / Lang I/II		VOL+		Vol+
	Subtitle		Subtitle / EQ		CH-		CH- / Page-





Original	Sustituto
 Open/Close	 Eject / Surround
 Vol-	 Vol-
 D.Setup	 Setup / OPT /
 Picture	 Picture / Format
 D.Menu	 D.Menu / Top
 Sound	 Sound / Title
 D.Title	 Shift + Sound / Title
 P.Size	 Zoom / Size
 D.Prog	 Shift + TV/Radio / Program
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

