
 




 









 

 











 





Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 Recall	 Back / Return
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--
 Menu	 Menu / Home

Original	Sustituto
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Play	 Play / Slow
 Down	 Down
 Audio	 Audio / Lang I/II
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 Red/Zoom	 Red / Netflix / Search
 Green/9 Pic.	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 >>	 >> / Tune+
 Sub-T	 Subtitle / EQ





Original	Sustituto
TEXT 	Text / Goto

Original	Sustituto

