



Original	Sustituto
 Open/Close	 Eject / Surround
 V-Mode	 Picture / Format
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide / EPG / -/--
 Search	 Red / Netflix / Search
 OSD	 Fav / Marker / PC
 Up	 Up

Original	Sustituto
 EQU	 Smart / List
 Left	 Left
 Setup	 Setup / OPT /
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Intro	 OK
 <</F.REV	 << / Tune-
 >>/F.FWD	 >> / Tune+
 I<</Prev	 I<< / Preset-
 >>I/Next	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Enter/Play	 Play / Slow
 Stop	 Stop / Hold
 I< Slow	 CH- / Page-
 Slow >I	 CH+ / Page+
 Volume-	 Vol-





Original	Sustituto	Original	Sustituto
 Volume+	 Vol+		
 Prog	 TV/Radio /		
 Subtitle	 Subtitle / EQ		
 Title/PBC	 Sound / Title		
 Menu	 Menu / Home		
 Zoom	 Zoom / Size		
 PAL/NTSC	 D.Menu / Top		
 Repeat	 Green / APP / Repeat		
 A-B RPT	 Yellow / YouTube / Repeat		
 Mute	 Mute / Dimmer		
 DSP	 Display / Media		
 Angle	 Info / Angle		
 Audio	 Audio / Lang I/II		

Original	Sustituto	Original	Sustituto

