



Original	Sustituto
TIMER	Timer
SLEEP	Sleep
MONO TUNER	Mono Tuner
CLOCK	Clock
CD EDIT/CHECK	CD Edit/Check
PRGM	PRGM
RANDOM/REPEAT	Random/Repeat
RANDOM/REPEAT	Random/Repeat
1	1
2	2
3	3
DECK1/2 TAPE	Tape/Deck1/2
4	4
5	5
6	6
BAND TUNER	Tuner/Band
7	7

Original	Sustituto
8	8
9	9
AUX VIDEO	Video/AUX
0	0
+10	+10
CD	CD
DISC DIRECT PLAY 1	Disc Direct Play 1
DISC DIRECT PLAY 2	Disc Direct Play 2
DISC DIRECT PLAY 3	Disc Direct Play 3
DISC DIRECT PLAY 4	Disc Direct Play 4
DISC DIRECT PLAY 5	Disc Direct Play 5
DISC DIRECT PLAY 6	Disc Direct Play 6
DISC DIRECT PLAY 7	Disc Direct Play 7
SURROUND	Surround
MANUAL SELECT	Manual Select
DOLBY PRO LOGIC	Dolby Pro Logic
T-BASS	T-Bass





Original	Sustituto
	Subtitle / EQ
	Info / Angle
	Eject / Surround
	Rec / Rec Mode
	Play / Slow
	Shift + >> / Preset+
	Up
	Vol+
	Pause / Step / Freeze
	Left
	<< / Tune-
	<<< / Preset-
	Shift + << /
	Right
	>> / Tune+
	>>> / Preset+
	Shift + >> /

Tune+

Original	Sustituto
	Vol-
	Power
	Down
	Stop / Hold
	Shift + <<< / Preset-
	Exit / Cancel / Clear

