











 

 

 

Original	Sustituto
Power	Power
Auto Off	Shift + Power
Sleep	Sleep / Timer
Muting	Mute / Dimmer
1	1
2	2
3	3
Disc	Display / Media
4	4
5	5
6	6
+10	Guide / EPG / -/--
7	7
8	8
9	9
0	0
Program	TV/Radio /

Original	Sustituto
Cancel	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Random	Blue / Prime Video / Random
Tape	Shift + 5
CD	Shift + 3
Tuner	Shift + 6
AUX	Shift + 7
EQ	Subtitle / EQ
3D AI	Smart / List
<<	<< / Tune-
I<<	I<< / Preset-
>>I	>>I / Preset+
>>	>> / Tune+
V.Bass	Sound / Title
</▼	Left
</▼	Down
</▼	CH- / Page-



Program



	Original	Sustituto	Original	Sustituto
	Stop	 Stop / Hold		
	Play/Pause/▲	 Play / Slow		
	Play/Pause/▲	 Right		
	Play/Pause/▲	 Pause / Step / Freeze		
	Play/Pause/▲	 Up		
	Play/Pause/▲	 CH+ / Page+		
	Volume-	 Vol-		
	Volume+	 Vol+		

