



 




 
 
 





Original	Sustituto
	Mute / Dimmer
	TV / Input / RDS
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List
	0
	TV/Radio /
	CH+ / Page+
	Guide / EPG / -/--

Original	Sustituto
	Vol+
	CH- / Page-
	Fav / Marker / PC
	Vol-
	Info / Angle
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Red / Audio
	Green / APP / Repeat
	Green / Subt





Original

Sustituto

	Yellow / Text		Text / Goto
	Yellow / Text		Yellow / YouTube / Repeat
	Blue / Sleep		Blue / Prime Video / Random
	Blue / Sleep		Sleep / Timer
	Option 1		D.Menu / Top
	Option 2		Setup / OPT /
	Pal / NTSC		Picture / Format
	Pause		Stop / Hold
	Freeze		Pause / Step / Freeze
	Zoom		Zoom / Size

Original

Sustituto

