



















Original	Sustituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	i / EPG
	i / EPG
	0
	List
	Up / CH+
	Up

Original	Sustituto
	Left
	Vol-
	OK
	Vol+
	Right
	Down
	CH- / Page-
	Exit / Cancel / Clear
	Menu / Home
	Rec / Rec Mode
	Back / Return
	Red / Netflix / Search
	<< / Tune-
	Play / Slow
	Green / APP / Repeat
	>> / Tune+
	Blue / Prime Video / Random





Original	Sustituto
Blue / >> / Text	Text / Goto
Radio	Shift + 6
Radio	Shift + TV/Radio / Program
Yellow / Pause	Pause / Step / Freeze
Yellow / Pause	Yellow / YouTube / Repeat
Stop	Stop / Hold
TV	Shift + 1
TV	TV/Radio /
F1	Sound / Title
F2	Audio / Lang I/II

Original	Sustituto

