



 







































 





 

 







 

 

 







Original	Sustituto
 Power	 Power
 Energy Saving	 Sleep / Timer
 AV Mode	 Picture / Format
 Input	 AV / Input / RDS
 Tv/Rad	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Q.Vlew	 Setup / OPT /

Original	Sustituto
 Vol+	 Vol+
 FAV/Mark/Char/Nu	 Fav / Marker / PC
 P+	 CH+ / Page+
 Vol-	 Vol-
 3D	 Zoom / Size
 Mute/Delete	 Mute / Dimmer
 P-	 CH- / Page-
 Menu	 Menu / Home
 NetCast	 Sound / Title
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return





Original	Sustituto	Original	Sustituto
GUIDE	Guide	GUIDE EPG	Guide / EPG / -/--
Red	Red	NETFLIX SEARCH	Red / Netflix / Search
Green	Green	APP REPEAT	Green / APP / Repeat
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
L/R SELECT	Blue/L/R/Select	Prime Video RANDOM	Blue / Prime Video / Random
TEXT	Text	GOTO TEXT	Text / Goto
T.OPT	T.Opt	SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
Stop	Stop	HOLD	Stop / Hold
Play	Play	SLOW	Play / Slow
Pause	Pause	STEP-FREEZE	Pause / Step / Freeze
<<	<<	TUNE-	<< / Tune-
>>	>>	TUNE+	>> / Tune+
Simplink	Simplink	MEDIA DISPLAY	Display / Media
INFO	Info	ANGLE INFO	Info / Angle
AD	AD	LANG I/II AUDIO	Audio / Lang I/II
APP/*	APP/*	SHIFT + APP REPEAT	Shift + Green / APP / Repeat

