

 
 


 
 
 



 


 
 


 




 


 




 














 


 
 



 



 






 
 





Original	Sustituto	Original	Sustituto
 Standby	 Shift + Power	 Tune	 Shift + 6
 On	 Power	 USB	 Shift + 8
 HDMI	 Shift + 0	 M-XP	 Shift + Guide / EPG / -/--
 Zone A	 Sound / Title	 Input Up	 CH+ / Page+
 Zone B	 Audio / Lang I/II	 Setup	 Setup / OPT /
 A/D	 Red / Netflix / Search	 Mute	 Mute / Dimmer
 ATT	 Green / APP / Repeat	 Volume+	 Vol+
 SPKR A-B	 Yellow / YouTube / Repeat	 Input Down	 CH- / Page-
 7.1	 Blue / Prime Video / Random	 Display	 Display / Media
 BD	 Shift + 5	 Surr	 Eject / Surround
 DVD	 Shift + 2	 Volume-	 Vol-
 VCR	 Shift + 4	 Top	 Smart / List
 DSS	 Shift + 9	 Up	 Up
 TV	 Shift + 1	 Info	 Info / Angle
 CD	 Shift + 3	 Left	 Left
 CDR	 Shift + Fav / Marker / PC	 Enter	 OK
 AUX	 Shift + 7	 Right	 Right



 

 







 





 

 





 



 

 

 

 

 

 

 







 

 

 

 

 

 

 



 

 



Original	Sustituto
	Menu / Home
	Down
	Exit / Cancel / Clear
	Guide / EPG / -/--
	1
	2
	3
	Sleep / Timer
	4
	5
	6
	Subtitle / EQ
	7
	8
	Text / Goto
	0
	9

Original	Sustituto
	I<< / Preset-
	>>I / Preset+
	Shift + CH- /
	<< / Tune-
	Shift + CH+ /
	>> / Tune+

 

 





 



 





 

 















 





 

 



 

 

 

 

 





Original	Sustituto	Original	Sustituto
 Power	 Power	 >>	 >> / Preset+
 Setup	 Setup / OPT /	 <<	 << / Tune-
 Mute	 Mute / Dimmer	 >>	 >> / Tune+
 Volume+	 Vol+	 1	 1
 Display	 Display / Media	 2	 2
 Volume-	 Vol-	 3	 3
 Up	 Up	 Repeat	 Green / APP / Repeat
 Left	 Left	 4	 4
 Enter	 OK	 5	 5
 Right	 Right	 6	 6
 Menu	 Menu / Home	 Random	 Blue / Prime Video / Random
 Down	 Down	 7	 7
 Memo	 Smart / List	 8	 8
 Pause	 Pause / Step / Freeze	 9	 9
 Play	 Play / Slow	 CLR	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 0	 0
 I<<<	 I<<< / Preset-	 +10	 Guide / EPG / -/-





Original		Sustituto		Original		Sustituto	
	Power		Power		2		2
	Mute		Mute / Dimmer		3		3
	Volume+		Vol+		4		4
	Display		Display / Media		5		5
	Volume-		Vol-		6		6
	Tune+		>> / Tune+		7		7
	Info		Info / Angle		8		8
	Preset-		l<< / Preset-		9		9
	Enter		OK		CLR		Exit / Cancel / Clear
	Preset+		>>l / Preset+		0		0
	Menu		Menu / Home		CAT-		CH- / Page-
	Tune-		<< / Tune-		CAT+		CH+ / Page+
	Memo		Smart / List				
	T.Mode		Text / Goto				
	P.Scan		D.Menu / Top				
	Band		Setup / OPT /				
	1		1				

