









 














Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Nicam/A2	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0

Original	Sustituto
 Recall	 Back / Return
 Display	 Display / Media
 Freeze	 Shift + Pause / Step /
 Auto/Goto	 Shift + Text /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear





Original	Sustituto
CH+ / Page+	CH+ / Page+
Media	Shift + Display / Media
Vol+	Vol+
CH- / Page-	CH- / Page-
Text	Text / Goto
Vol-	Vol-
Hold	Shift + Stop /
Reveal	Setup / OPT /
Size	Zoom / Size
Index	Smart / List
S.Title	Subtitle / EQ
S.Page	Eject / Surround
Play	Play / Slow
Pause	Pause / Step / Freeze
FAV	Fav / Marker / PC
<<	<< / Tune-
>>	>> / Tune+

Original	Sustituto
Stop	Stop / Hold
L<<	L<< / Preset-
R>>	R>> / Preset+

