
 
 






































Original	Sustituto
 Power	 Power
 AV	 AV / Input / RDS
 Eject	 Eject / Surround
 TTX	 Text / Goto
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 T.Rec / Mix	 OK
 Display / Reveal	 Display / Media
 Red / OTR	 Red / Netflix / Search
 Green / T.Speed	 Green / APP / Repeat
 Auto Trak+ / L/F	 >>I / Preset+
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Auto Trak- / Subcode	 I<< / Preset-
 Index	 Info / Angle
 Left	 Left
 Right	 Right

Original	Sustituto
 Rec	 Rec / Rec Mode
 C/Clear	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Play	 Play / Slow
 << Rew	 << / Tune-
 P/Still / Hold	 Pause / Step / Freeze
 P/Still / Hold	 Shift + Stop /
 FF >>	 >> / Tune+
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+
 PR/Page-	 CH- / Page-
 PR/Page+	 CH+ / Page+
 1	 1
 2	 2
 3	 3
 4	 4



