


 














 

 
 


 
 

 
 

 

 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 Nicam	 Audio / Lang I/II
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Display	 Display / Media
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 List	 Smart / List
 FAV/List	 Fav / Marker / PC
 CH-	 CH- / Page-
 Tv/Radio	 TV/Radio /





Original	Sustituto
EPG	Guide / EPG / -/--
Aspect	Shift + Picture / Format
Freeze	Pause / Step / Freeze
Index	Info / Angle
Cancel	Shift + Exit / Cancel / Clear
Subpage	Subtitle / EQ
Text	Text / Goto
Reveal	D.Menu / Top
Size	Zoom / Size
Hold	Stop / Hold
Mix	Setup / OPT /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Cyan	Blue / Prime Video / Random

Original	Sustituto

