



















































 







 


















 












Original	Sustituto	Original	Sustituto
 Power Tv	 +  Shift + Power	 1	 1
 Tv/AV Tv	 +  Shift + TV/Radio / Program	 2	 2
 Volume+ Tv	 Vol+	 3	 3
 CH+ Tv	 +  Shift + CH+ /	 <<	 << / Tune-
 Volume- Tv	 Vol-	 >>	 >> / Tune+
 CH- Tv	 +  Shift + CH- /	 4	 4
 Power	 Power	 5	 5
 OSD	 Display / Media	 6	 6
 I< Index	 I<< / Preset-	 Stop	 Stop / Hold
 Index >I	 >>I / Preset+	 7	 7
 Timer Rec	 Sleep / Timer	 8	 8
 Check	 Smart / List	 9	 9
 Transmit	 Subtitle / EQ	 Input Select	 AV / Input / RDS
 Play	 Play / Slow	 0	 0
 SP/LP	 Picture / Format	 -/--	 Guide / EPG / -/--
 Audio Out	 Audio / Lang I/II	 Menu	 Menu / Home
 AV Link	 TV/Radio /	 Up/Trackin/V-Lock	 Up





	Original	Sustituto	Original	Sustituto
	Exit	 Exit / Cancel / Clear		
	Pause/Still	 Pause / Step / Freeze		
	Slow	 Shift + Play /		
	+	 CH+ / Page+		
	Left/Display	 Left		
	Store/Reset	 OK		
	Right/Zero Stop	 Right		
	Rec	 Rec / Rec Mode		
	-	 CH- / Page-		
	Down/Tracking/V-Lock-	 Down		

