



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause/Subpage	 Pause / Step / Freeze
 Stop/Hold	 Stop / Hold
 Rec	 Rec / Rec Mode
 <</Index	 << / Tune-
 >>/Size	 >> / Tune+
 I<</Mix	 I<< / Preset-
 >>I/Timeshift	 >>I / Preset+
 →ISI←	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 →IPI←	 Picture / Format
 Sleep	 Sleep / Timer
 TXT	 Text / Goto
 Input	 AV / Input / RDS
 Menu	 Menu / Home

Original	Sustituto
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Disp	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original	Sustituto	Original	Sustituto
[6]	6	[TUNER 6]	6
[7]	7	[AUX - HDD 7]	7
[8]	8	[USB 8]	8
[9]	9	[BLUETOOTH 9]	9
[EPG]	EPG	[GUIDE EPG]	Guide / EPG / -/--
[0]	0	[HDMI - BAT 0]	0
[Red]	Red	[NETFLIX SEARCH]	Red / Netflix / Search
[Green]	Green	[APP REPEAT]	Green / APP / Repeat
[Yellow]	Yellow	[YouTube REPEAT A-B]	Yellow / YouTube / Repeat
[MOUSE]	Blue/Mouse	[Prime Video RANDOM]	Blue / Prime Video / Random
[HOME]	Home	[SHIFT + HOME MENU]	Shift + Menu /
[WWW.]	WWW.	[SHIFT + MEDIA DISPLAY]	Shift + Display / Media

