 


 


 





































 

 

 

 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Index Search	 OK
 Play	 Play / Slow	 Sharpness/V.Hold	 Right
 Pause	 Pause / Step / Freeze	 PGM	 Exit / Cancel / Clear
 Stop/Eject	 Stop / Hold	 Index-	 Down
 Rec	 Rec / Rec Mode	 Enter/CH.Memo	 Back / Return
 <<	 << / Tune-	 +/MFT+	 Vol+
 >>	 >> / Tune+	 Tv Line	 Smart / List
 I>/Slow	 >>I / Preset+	 CH/Tracking+	 CH+ / Page+
 Count Reset	 Picture / Format	 -/MFT-	 Vol-
 Count Stop	 Zoom / Size	 Display On/Off	 Display / Media
 Clock Counter	 Sleep / Timer	 CH/Tracking-	 CH- / Page-
 Tv/VCR	 TV/Radio /	 1	 1
 OTR	 Setup / OPT /	 2	 2
 PGM Set	 Menu / Home	 3	 3
 Index+	 Up	 4	 4
 T-Rec	 Info / Angle	 5	 5
 Sharpness/V.Hold-	 Left	 6	 6





Original	Sustituto
7	7
8	8
9	9
AFT Retracking	Guide / EPG / -/--
0	0
CH Preset	Fav / Marker / PC
Auto Search	Red / Netflix / Search
Clock Set	Green / APP / Repeat
Search Down	Yellow / YouTube / Repeat
Search Up	Blue / Prime Video / Random

Original	Sustituto

