
















 
 


 
 








 

 







Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Auto	 Smart / List
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Display	 Display / Media
 Nicam	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 +/-	 Shift + Guide / EPG / +/-
 Recall	 Back / Return
 LCD Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH-	 CH- / Page-
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Vol+	 Vol+
 Text	 Text / Goto
 Hold	 Stop / Hold





	Original	Sustituto		Sustituto
INDEX	Index	TOP MENU D.MENU	D.Menu / Top	
SIZE	Size	SIZE ZOOM	Zoom / Size	
EPG	EPG	GUIDE EPG	Guide / EPG / -/--	
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ	
SUBPAGE	Subpage	SHIFT + EQ SUBTITLE	Shift + Subtitle / EQ	
REVEAL	Reveal	PROGRAM TV/ RADIO	TV/Radio /	
Red	Red	NETFLIX SEARCH	Red / Netflix / Search	
Green	Green	APP REPEAT	Green / APP / Repeat	
Yellow	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat	
Blue	Blue	Prime Video RANDOM	Blue / Prime Video / Random	
FAV	FAV	PC FAV MARKER	Fav / Marker / PC	
FAV-	FAV-	TUNE- ◀◀	<< / Tune-	
FAV+	FAV+	TUNE+ ▶▶	>> / Tune+	
Lang	Lang	LANG I/II AUDIO	Audio / Lang I/II	
ASPECT	Aspect	SHIFT + FORMAT PICTURE	Shift + Picture / Format	

	Original	Sustituto

