



Original	Sustituto
	Mute / Dimmer
	Power
	Smart / List
	TV/Radio /
	Audio / Lang I/II
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Text / Goto
	0
	Subtitle / EQ

Original	Sustituto
	Menu / Home
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Setup / OPT /
	Up
	CH+ / Page+
	Left
	Vol-
	OK
	Vol+
	Right
	Down
	CH- / Page-
	Pause / Step / Freeze
	Shift + CH- /
	Shift + CH+ /
	Display / Media



