 






 






 













 

 







Original	Sustituto
	 Power
	 Ambilight
	 Shift + Blue / Prime
	 Shift + Yellow / YouTube /
	 Shift + Red / Netflix /
	 D.Menu / Top
	 AV / Input / RDS
	 Exit / Cancel / Clear
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Display / Media
	 Shift + Menu / Home

Home

Original	Sustituto
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Info / Angle
	 Pause / Step / Freeze
	 Stop / Hold
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Vol+
	 Guide / EPG / -/-
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1





Original		Sustituto	
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
TEXT	Text	GOTO TEXT	Text / Goto
0	0	HDMI - BAT 0	0
⚙️	*	OPT-TOOLS SETUP	Setup / OPT /

Original		Sustituto	

