



| Original | Sustituto |
|------------|--------------------|
| Power | Power |
| Open/Close | Eject / Surround |
| Scan | Display / Media |
| Swap | Back / Return |
| Call | Shift + OK |
| Mute | Mute / Dimmer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| -/-- | Guide / EPG / -/-- |

| Original | Sustituto |
|---------------|-----------------------------|
| TV/AV | AV / Input / RDS |
| P+ | CH+ / Page+ |
| TV/DVD | Smart / List |
| V- | Vol- |
| Menu | Menu / Home |
| V+ | Vol+ |
| Exit | Exit / Cancel / Clear |
| P- | CH- / Page- |
| P.STD | Picture / Format |
| Red/Picture | Shift + Picture / Format |
| Red/Picture | Red / Netflix / Search |
| Green/Sound | Sound / Title |
| Green/Sound | Green / APP / Repeat |
| Yellow/Time | Yellow / YouTube / Repeat |
| Blue/Function | Blue / Prime Video / Random |
| << | << / Tune- |
| >> | >> / Tune+ |





| Original | Sustituto |
|----------|-------------------------------|
| PREV | PRESET- |
| I<< | I<< / Preset- |
| NEXT | PRESET+ |
| >>I | >>I / Preset+ |
| TUNE | SHIFT + TV/RADIO |
| Tune | Shift + TV/Radio / Program |
| Up | Up |
| Down | Down |
| PROGRAM | PROGRAM TV/RADIO |
| Program | TV/Radio / |
| ZOOM | SIZE ZOOM |
| Zoom | Zoom / Size |
| D.CALL | ANGLE INFO |
| D.Call | Info / Angle |
| [♦] | SHIFT + SIZE ZOOM |
| [♦] | Shift + Zoom / |
| [-] | TOP MENU D.MENU |
| [-] | D.Menu / Top |
| [/=] | SHIFT + GOTO TEXT |
| [/=] | Shift + Text / |
| [=] | GOTO TEXT |
| [=] | Text / Goto |
| [X] | SHIFT + CLEAR EXIT |
| [X] | Shift + Exit / Cancel / Clear |
| [?] | OPT-TOOLS SETUP |
| [?] | Setup / OPT / |
| [+] | EQ SUBTITLE |
| [+] | Subtitle / EQ |
| Timer | TIMER SLEEP |
| Timer | Sleep / Timer |
| > | Right |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Sustituto |
|--------------|-----------------------------|
| Power | Power |
| Open / Close | Eject / Surround |
| Scan | Shift + Setup / OPT / Tools |
| Swap | Back / Return |
| Call | Smart / List |
| Mute | Mute / Dimmer |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| -/-- | Guide / EPG / -/-- |

| Original | Sustituto |
|---------------|---------------------------|
| TV/AV | AV / Input / RDS |
| I-II | Shift + Audio / Lang I/II |
| P+ | CH+ / Page+ |
| TV/DVD | Shift + 2 |
| TV/DVD | Shift + 1 |
| V- | Vol- |
| Menu | Menu / Home |
| V+ | Vol+ |
| Exit | Exit / Cancel / Clear |
| P- | CH- / Page- |
| P.Std | Picture / Format |
| Red / Picture | Red / Netflix / Search |
| Red / Picture | Shift + Picture / Format |
| Green / Sound | Green / APP / Repeat |
| Green / Sound | Shift + Sound / Title |
| Yellow / Time | Yellow / YouTube / Repeat |
| Yellow / Time | Sleep / Timer |





| Original | Sustituto |
|-----------------|---------------------------------------|
| Blue / Function | Blue / Prime Video / Random |
| Rev | << / Tune- |
| Fwd | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Stop | Stop / Hold |
| Setup | Setup / OPT / |
| Pause / Step | Pause / Step / Freeze |
| White / Tune | Display / Media |
| D.Menu | D.Menu / Top |
| Up | Up |
| Repeat | Shift + Green / APP / Repeat |
| A-B | Shift + Yellow / YouTube / Repeat A-B |
| Left | Left |
| Play / Enter | Play / Slow |
| Play / Enter | OK |
| Right | Right |

| Original | Sustituto |
|-------------|-------------------------------|
| Slow | Shift + Play / |
| Angle | Info / Angle |
| Down | Down |
| Title / PBC | Sound / Title |
| Search | Shift + Red / Netflix / |
| Audio | Audio / Lang I/II |
| Program | TV/Radio / |
| Zoom | Zoom / Size |
| D.Call | Shift + Smart / List |
| 10+ | Shift + Guide / EPG / -/- |
| Caption | Subtitle / EQ |
| Hold | Shift + Stop / |
| [-] | Shift + TV/Radio / Program |
| Mix | Shift + Text / |
| Text | Text / Goto |
| [X] | Shift + Exit / Cancel / Clear |
| Reveal | Shift + Sleep / Timer |





| Original | Sustituto | Original | Sustituto |
|---|--|----------|-----------|
|  |  Shift + Zoom / | | |
|  |  Shift + Subtitle / EQ | | |
|  |  Shift + Eject / Surround | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

