


 

 



 



 









 

 

 

 



Original	Sustituto
Standby/On	Power
Eject	Eject / Surround
Index	Info / Angle
Rec Speed	Setup / OPT /
CLK/Count	D.Menu / Top
Picture	Picture / Format
Timer	Sleep / Timer
1	1
2	2
3	3
Strobe	Blue / Prime Video / Random
Audio	Audio / Lang I/II
4	4
5	5
6	6
Art	Text / Goto
Input	AV / Input / RDS

Original	Sustituto
7	7
8	8
9	9
+	Vol+
CH+	CH+ / Page+
100	Guide / EPG / -/-
0	0
CLR/RST	Exit / Cancel / Clear
-	Vol-
CH-	CH- / Page-
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause/Still	Pause / Step / Freeze
Display	Display / Media





Original	Sustituto
 Monitor	 Yellow / YouTube / Repeat
 A.Dub	 Sound / Title
 Input System	 Red / Netflix / Search
 Up	 Up
 Output System	 Green / APP / Repeat
 Left	 Left
 OK	 OK
 Right	 Right
 Auto	 Smart / List
 Down	 Down
 Menu	 Menu / Home
 ← Tracking	 I<< / Preset-
 Tracking →	 >>I / Preset+
 Slow-	 Shift + Down
 Slow+	 Shift + Up

Original	Sustituto

