





































Original	Sustituto	Original	Sustituto
Power	Power	Vol+	Vol+
Sub-T	Subtitle / EQ	FAV	Fav / Marker / PC
Lang	Audio / Lang / I / II	Down / CH-	Down
Mute	Mute / Dimmer	Tv / Radio	TV / Radio /
EPG	Guide / EPG / - / -	1	1
Goto	Shift + Text /	2	2
Page+	CH+ / Page+	3	3
TTX	Text / Goto	Recall	Back / Return
Repeat	Shift + Green / APP /	4	4
Page-	CH- / Page-	5	5
Menu	Menu / Home	6	6
Up / CH+	Up	Info	Info / Angle
Exit	Exit / Cancel / Clear	7	7
Vol-	Vol-	8	8
Left	Left	9	9
OK	OK	0	0
Right	Right	<< / Tune-	<< / Tune-





Original	Sustituto
 Power	 Power
 Sub-T	 Subtitle / EQ
 Lang	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 EPG	 Guide / EPG / -/--
 Goto	 Shift + Text /
 Page+	 CH+ / Page+
 TTX	 Text / Goto
 Repeat	 Shift + Green / APP /
 Page-	 CH- / Page-
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right

Original	Sustituto
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 Down/CH-	 Down
 Tv/Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 Info	 Info / Angle
 7	 7
 8	 8
 9	 9
 0	 0
 <<	 << / Tune-





Original	Sustituto
	>> / Tune+
	<< / Preset-
	>> / Preset+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Sustituto

