























 








 




Original	Sustituto
 Standby	 Power
 DTV/VCR	 AV / Input / RDS
 Mute	 Mute / Dimmer
 Info	 Info / Angle
 TV / Radio	 Pause / Step / Freeze
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Fav	 Smart / List
 Down / CH-	 CH- / Page-

Original	Sustituto
 Down / CH-	 Down
 Recall	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 TTX	 Display / Media
 4	 4
 5	 5
 6	 6
 OPT	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Red	 TV/Radio /
 Green	 Audio / Lang I/II
 Yellow	 Subtitle / EQ



