 















 



 
 



 
 

 
 






 



 



 


 
 



 



 



 















 







 


 



 










 

 







Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	DTV		Shift + 1
	DTV		TV/Radio /
	Radio		Shift + TV/Radio / Program
	Radio		Shift + 6
	USB		Shift + 8
	DVD		Shift + 2
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Guide		Guide / EPG / -/--
	0		0
	Recall		Back / Return
	Vol+		Vol+
	P.Mode		Picture / Format
	CH+		CH+ / Page+
	S.Mode		Sound / Title
	Vol-		Vol-
	FAV		Fav / Marker / PC
	CH-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Source		AV / Input / RDS





Original	Sustituto
	 Down
	 Info / Angle
	 Shift + Picture / Format
	 Sleep / Timer
	 Audio / Lang I/II
	 Subtitle / EQ
	 Text / Goto
	 Shift + Stop /
	 Zoom / Size
	 Display / Media
	 Shift + Power
	 D.Menu / Top
	 Rec / Rec Mode
	 I<< / Preset-
	 >>I / Preset+
	 Stop / Hold
	 Eject / Surround

Original	Sustituto
	 Setup / OPT /
	 Smart / List
	 << / Tune-
	 >> / Tune+
	 Pause / Step / Freeze
	 Play / Slow
	 Shift + Text /
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Shift + Yellow / YouTube /
	 Yellow / YouTube / Repeat
	 Shift + Info / Angle
	 Blue / Prime Video / Random
	 Shift + Green / APP /

