


 

 
 













 


Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Recall	Back / Return
0	0
Source	AV / Input / RDS
Vol+	Vol+
A/D/Content Menu	Smart / List
P+	CH+ / Page+
Vol-	Vol-

Original	Sustituto
Mute	Mute / Dimmer
P-	CH- / Page-
Menu/DVD	Menu / Home
Exit/Return	Exit / Cancel / Clear
Up	Up
Left	Left
OK	OK
Right	Right
Guide/Top	Guide / EPG / -/-
Down	Down
Tv/FAV/Radio/Set	TV/Radio /
Tv/FAV/Radio/Set	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[<>]	Picture / Format



































 








 
 
 
 

























Original	Sustituto	Original	Sustituto
 ←[/]→	 Display / Media		
 [i+]/[≡i]	 Info / Angle		
 Text	 Text / Goto		
 Audio	 Audio / Lang I/II		
 Subtitle	 Subtitle / EQ		
 Eject	 Eject / Surround		
 O)I/II	 Shift + Audio / Lang I/II		
 Stop	 Stop / Hold		
 Play/[≡o]	 Play / Slow		
 II/II>/[∇]	 Pause / Step / Freeze		
 I<</[≡?]	 I<< / Preset-		
 <</[≡+]	 << / Tune-		
 >>/[≡◇]	 >> / Tune+		
 >>I/[O]/[≡X]	 >>I / Preset+		











 



 

 

 
 
 

 









 




 




















 



 








Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O/I/I
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow





Original	Sustituto	Original	Sustituto
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Shift + Back / Return
 4	 4	 Exit/Return	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Guide/Top	 D.Menu / Top
 Recall	 Back / Return	 Down	 Down
 0	 0	 Tv/FAV/Radio/Set	 TV/Radio /
 Source	 AV / Input / RDS	 Tv/FAV/Radio/Set	 Setup / OPT /
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 A/D / Content	 Smart / List	 Green	 Green / APP / Repeat
 P+	 CH+ / Page+	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random



