























































 

 







 




 


Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 USB/Media 1	 Display / Media
 USB/Media 1	 Shift + 8
 Play/Pause/Text	 Text / Goto
 Play/Pause/Text	 Play / Slow
 Play/Pause/Text	 Pause / Step / Freeze
 Stop/Index	 Stop / Hold
 Rec/Media2	 Rec / Rec Mode
 Rec/Media2	 Shift + Display / Media
 I<</Hold	 I<< / Preset-
 >>I/Size	 >>I / Preset+
 <</S.Page	 << / Tune-
 >>/Reveal	 >> / Tune+
 I-II/Nicam	 Shift + Picture / Format
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ

Original	Sustituto
 Tv/Radio	 TV/Radio /
 i	 Info / Angle
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Mouse	 Shift + OK
 Smart	 Smart / List
 Exit	 Exit / Cancel / Clear
 CH+	 CH+ / Page+
 EPG	 Guide / EPG / -/-
 VOL+	 Vol+
 CH-	 CH- / Page-





Original	Sustituto
 Open/Close	 Eject / Surround
 Vol-	 Vol-
 D.Setup	 Setup / OPT /
 Picture	 Picture / Format
 D.Menu	 D.Menu / Top
 Sound	 Sound / Title
 D.Title	 Shift + Sound / Title
 P.Size	 Zoom / Size
 D.Prog	 Shift + TV/Radio / Program
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

