







 

 




 








 
 
 
 


Original	Sustituto
 Power	 Power
 Display	 Shift + Info
 Mute	 Mute
 Video	 Back
 Scart	 Smart
 PC	 Media
 TV	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 Subpage	 Eject
 PRE-CH	 Pre Ch
 Source	 AV
 PIP	 3D
 Sound	 Dual
 Sleep	 Sleep
 DTV Menu	 D. Menu
 Zoom-	 <<
 Zoom+	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down





Original	Sustituto	Original	Sustituto
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Teletext	 Text		
 Mix	 Options		
 Info	 Info		
 Index	 Guide		
 Size	 Format		
 Hold	 List		
 Subtitle	 Subt		
 Reveal	 Shift + Text		

