



 




 
 

 



 

 



















Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Freeze	 Pause / Step / Freeze
 0	 0

Original	Sustituto
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK / Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Home	 Shift + Menu /
 Vol+	 Vol+





	Original	Sustituto
	CH-	CH / Page-
	Mouse	Smart / List
	Vol-	Vol-
	<< / Text	<< / Tune-
	<< / Text	Text / Goto
	>> / Hold	SHIFT + Shift + Stop /
	>> / Hold	TUNE+ >> / Tune+
	I<< / Mix	PRESET- I<< / Preset-
	I<< / Mix	SHIFT + Shift + Text /
	>>I / Reveal	PRESET+ >>I / Preset+
	Play/Pause / Index	SLOW Play / Slow
	Stop / Size	HOLD Stop / Hold
	Stop / Size	SIZE Zoom / Size
	FAV	PC FAV MARKER Fav / Marker / PC
	Aspect	SHIFT + Shift + Picture / Format
	File	MEDIA DISPLAY Display / Media
	Delete	SURROUND Eject / Surround

	Original	Sustituto
	Zoom-	SHIFT + Shift + Down
	Zoom+	SHIFT + Shift + Up
	EPG	GUIDE EPG Guide / EPG / -/-
	DTV / Radio	PROGRAM TV/RADIO /
	Rec	REC MODE Rec / Rec Mode
	Subtitle	EQ SUBTITLE Subtitle / EQ

