




Original	Sustituto
 Power	 Power
 Display	 Display / Media
 Guide	 Guide / EPG / -/--
 Source	 AV / Input / RDS
 Wide	 Picture / Format
 MPX	 Setup / OPT /
 Menu	 Menu / Home
 Up	 Up
 Back / Cancel	 Back / Return
 Back / Cancel	 Exit / Cancel / Clear
 Left / <<	 Left
 Left / <<	 << / Tune-
 OK	 OK
 Right / >>	 Right
 Right / >>	 >> / Tune+
 Mute	 Mute / Dimmer
 Down	 Down

Original	Sustituto
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Teletext	 Text / Goto
 0	 0
 Subtitle	 Subtitle / EQ





Original	Sustituto	Original	Sustituto
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Index / I<<	 I<< / Preset-		
 Index / I<<	 Info / Angle		
 Size / Rec/Stop	 Rec / Rec Mode		
 Size / Rec/Stop	 Stop / Hold		
 Size / Rec/Stop	 Zoom / Size		
 Hold / Play/Pause	 Shift + Stop /		
 Hold / Play/Pause	 Play / Slow		
 Hold / Play/Pause	 Pause / Step / Freeze		
 Reveal / >>I	 >>I / Preset+		
 Reveal / >>I	 Smart / List		

Original	Sustituto	Original	Sustituto

