


 
 

 

















 
 









 





















Original	Sustituto
 Open/Close	 Eject / Surround
 Mute	 Mute / Dimmer
 DVD	 Shift + 2
 Tuner	 Shift + 6
 Scart	 Yellow / YouTube / Repeat
 AUX	 Shift + 7
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Shift + Guide / EPG / -/-

Original	Sustituto
 Setup	 Setup / OPT /
 FM Mode	 Guide / EPG / -/-
 Pre/Tun	 Fav / Marker / PC
 Memo	 Rec / Rec Mode
 Auto	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Vol-	 Vol-
 Vol+	 Vol+
 CH-	 CH- / Page-
 CH+	 CH+ / Page+





Original	Sustituto
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 Slow	 Shift + Play /
 A-B	 Shift + YouTube / YouTube /
 Goto	 Text / Goto
 Title	 Sound / Title
 Menu	 Menu / Home
 Display	 Display / Media
 Subtitle	 Subtitle / EQ
 N/P	 Shift + Setup / OPT / Tools
 Language	 Audio / Lang I/II
 Angle	 Info / Angle
 Resume	 Shift + Display / Media

Original	Sustituto
 Repeat	 Green / APP / Repeat
 R/L	 Shift + Subtitle / EQ
 Video	 Shift + 4
 Return	 Back / Return

