 

 



 

 

 





 

 
 
 



 


 



 

 

 

 

 



 

 

 





| Original | Sustituto | Original | Sustituto |
|---|---|---|---|
|  Open/Close |  Eject / Surround |  Skip >>I |  >>I / Preset+ |
|  1 |  1 |  Tuning >> |  >> / Tune+ |
|  2 |  2 |  Band |  D.Menu / Top |
|  3 |  3 |  FM Mode |  TV/Radio / |
|  4 |  4 |  Repeat |  Green / APP / Repeat |
|  5 |  5 |  Cancel |  Exit / Cancel / Clear |
|  6 |  6 |  EQ |  Subtitle / EQ |
|  7 |  7 |  Set |  Menu / Home |
|  8 |  8 | | |
|  9 |  9 | | |
|  0 |  0 | | |
|  +10 |  Guide / EPG / -/-- | | |
|  Play |  Play / Slow | | |
|  Pause |  Pause / Step / Freeze | | |
|  Stop |  Stop / Hold | | |
|  << Tuning |  << / Tune- | | |
|  I<< Skip |  I<< / Preset- | | |

